


1 Lower Chassis and Radio Tray Installation:

1a Battery Strap Installation:

The P6710 is equipped with a Velcro™ style battery strap system. This strap along with the edges of the radio trays will hold most style battery packs securely within the vehicle. If your battery pack does happen to be wider you may need to sand the edges of the Radio Trays and the opening in the upper deck slightly to facilitate proper fit. For information on the installation of the strap itself please see instruction **BM**. (other side)

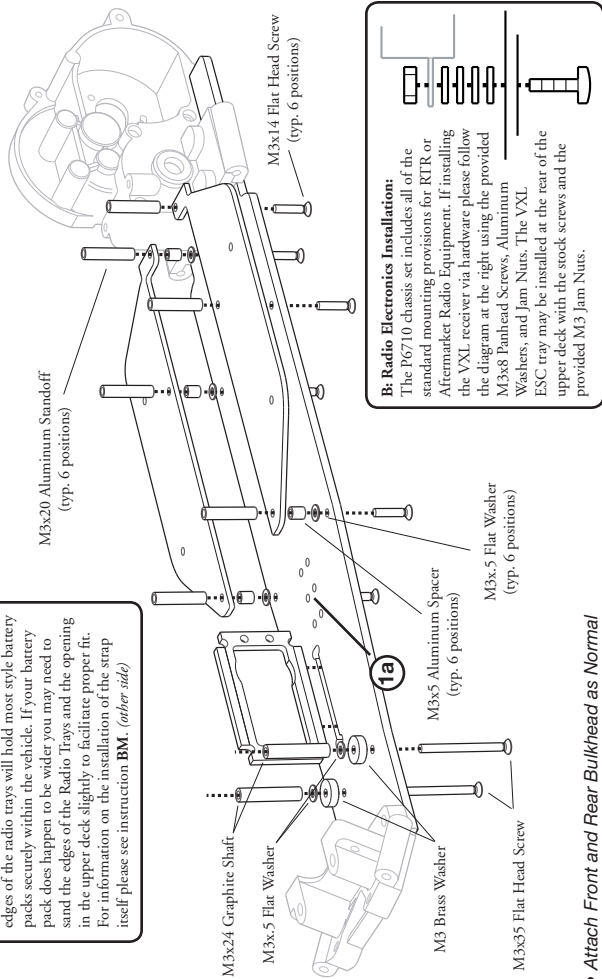


B: Radio Electronics Installation:
The P6710 chassis set includes all of the standard mounting provisions for RTR or Aftermarket Radio Equipment. If installing the VXL receiver via hardware please follow the diagram at the right using the provided M3x8 Panhead Screws, Aluminum Washers, and Jam Nuts. The VXL ESC tray may be installed at the rear of the upper deck with the stock screws and the provided M3 Jam Nuts.

• Attach Front and Rear Bulkhead as Normal

2 Upper Deck and Rear Shock Tower Installation:

2a Steering Linkage and Servo Installation:

Before installing the upper deck on the P6710 please install the stock steering bell cranks and linkage in the car as normal over the P6710's graphite steering posts. Included with the P6710 is a graphite drag link setup which should be installed prior to this step. You may find the instructions for installation of the servo and steering drag link in instruction **SS**. (other side)

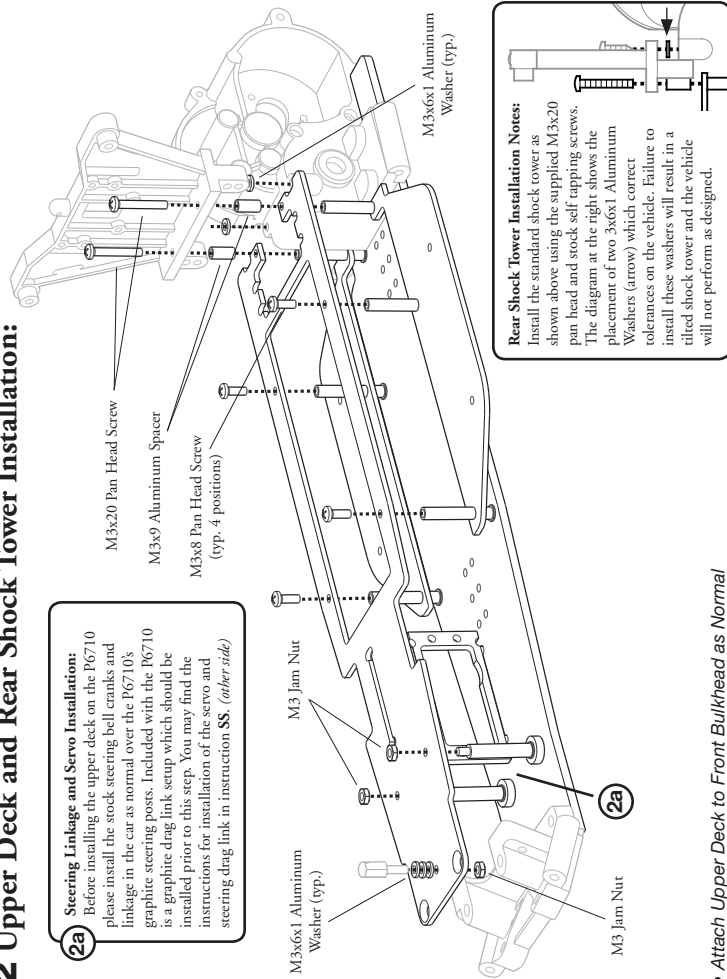

Rear Shock Tower Installation Notes:
Install the standard shock tower as shown above using the supplied M3x20 pan head and stock self tapping screws. The diagram at the right shows the placement of two 3x6x1 Aluminum Washers (arrow) which correct tolerances on the vehicle. Failure to install these washers will result in a tilted shock tower and the vehicle will not perform as designed.

• Attach Upper Deck to Front Bulkhead as Normal



Performance Chassis
for Traxxas Rustler/Bandit

P6710

P6710 Replacement Parts


P6711	P6710 G10 Main Chassis	\$26.99
P6712	P6710 Graphite Upper Deck	\$41.99
P6713	P6710 Steering/Servo Mount Kit	\$18.99
P6714	P6710 Chassis Hardware Kit	\$24.99
P6715	P6710 Side Plate Set	\$12.99
P6719	P6710 Battery Strap Kit	\$9.99

P6710 Option Parts

P6711g	P6710 Graphite Chassis Upgrade Kit	\$74.99
P6716	Rustler/Bandit Front Tower Suspension Kit	\$36.99
P6717	Rustler/Bandit Rear Shock Tower Brace Set	\$24.99

1230P N Jefferson Street Anaheim CA 92807 •
714.630.9015 • 714.630.6250FAX • <http://www.penguinrc.com>


BM Battery Mounting Installation:

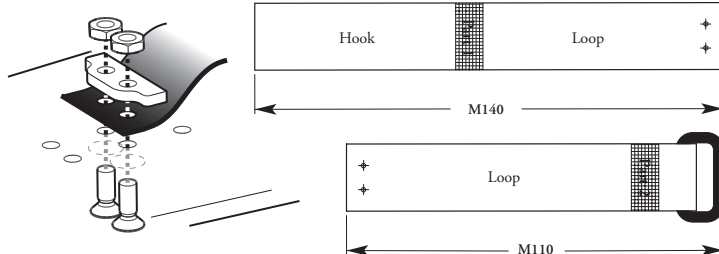

Battery Strap Cutting and Mounting:

- 1 - Use measurements above to cut strap into two parts. (may be user adjusted if wanted)
- 2 - Cut or punch holes (+) into strap, M5 from end, M7 apart. (as shown)
- 3 - Select battery location and attach straps to chassis as shown above using provided M3x8 Flat Head screws and M3 Jam Nuts.

SS Servo and Steering Link Installation:

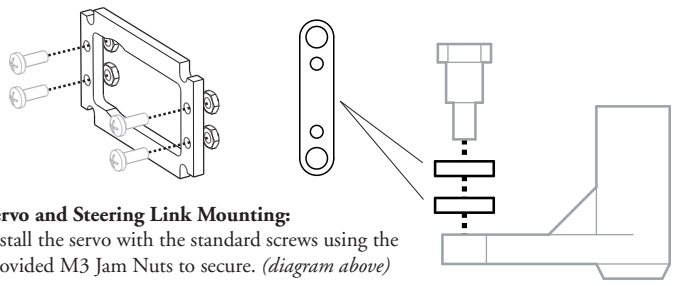

Servo and Steering Link Mounting:

Install the servo with the standard screws using the provided M3 Jam Nuts to secure. (diagram above)

Steering Link Mounting:

Use the existing shoulder screws to install (2x) graphite centersteering link. These links replace the stock plastic link which reduces flex and stretch improving steering precision. (diagram above-right)